

COMPONENT LOCATIONS

201
240
D

AUXILIARY FAN/HEATER/AIR CONDITIONING

		Page-Figure
A/C Compressor Clutch.....	Lower LH front of engine	207-3
A/C Compressor Low Pressure Cut-Out Switch	On receiver drier	201-1
A/C Relay	Top of LH front wheel well, in relay box	
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Top of LH front wheel well, in relay box	201-2
Blower Motor	Above passenger's footwell	208-1
Blower Resistors	In fresh air duct	
Blower Switch	On upper console	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	205-1
Receiver Drier Temperature Switch	On receiver drier, behind RH headlights	201-1
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup Light Switch.....	LH side of automatic transmission	208-3
Temperature Vacuum Switch	On upper console	
C134 (4 pins).....	Above LH side of passenger's footwell	208-1
C146 (4 pins).....	Beside upper console, above accelerator	208-2
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

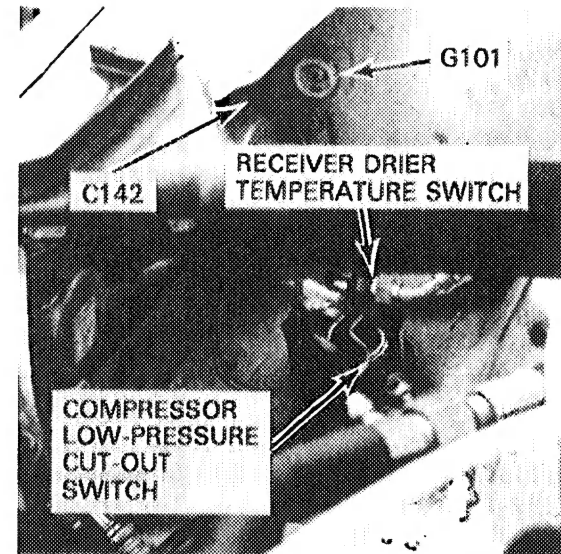


Figure 1 - Behind RH Headlight Assembly

BACKUP LIGHTS/TRANSMISSION KICKDOWN

Backup Light Switch	Base of manual transmission shifter	
Fuse Box	LH rear corner of engine compartment	100-1
Kickdown Solenoid	RH front side of transmission	206-2
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup Light Switch.....	LH side of automatic transmission	208-3
C104 (14 pins)	To right of emergency brake support	205-2
C146 (4 pins).....	Beside upper console, above accelerator	208-2
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

CENTER CONSOLE ILLUMINATION

Fiber Optic Light Sources.	Behind upper console	
Hazard Warning Switch/Flasher	On center console	
Light Switch.....	Instrument panel, left of steering column	
Fuse Box	LH rear corner of engine compartment	100-1
G102	Behind instrument cluster	202-1

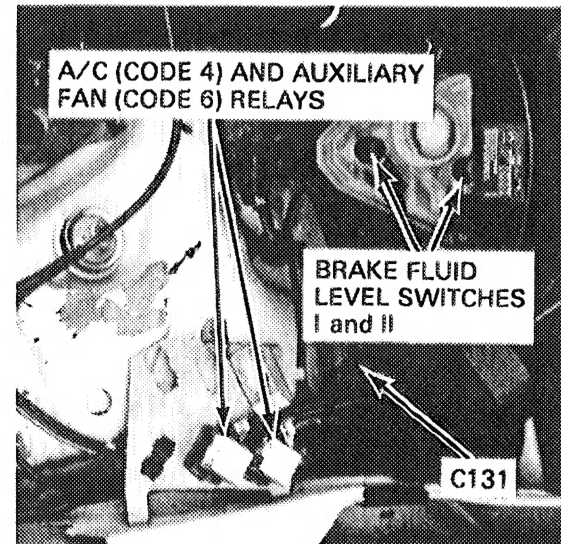


Figure 2 - Behind LH Front Wheel Well

COMPONENT LOCATIONS

CHARGING SYSTEM

Page-Figure

Alternator	Front of engine	
Battery	RH rear of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH side of engine	
G100	RH front fender, ahead of battery	206-1

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Switch	On upper console	
Antenna Motor/Relay	Behind LH rear wheel well.....	202-2
Fuse Box	LH rear corner of engine compartment	100-1
In-Line Radio Fuse	In upper console behind radio	
C104 (14 pins)	To right of emergency brake support	
C135 (6 pins).....	Behind LH rear wheel well	
C148 (2 pins).....	Behind rear of ash tray	
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2

COURTESY LIGHTS

Front Dome Light and Switch	Behind rear view mirror assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Door Switches	In each door jamb	
Rear Dome Light Switch	On upper console	
Warning Module	To right of emergency brake support	205-2
G102	Behind instrument cluster	202-1

GLOVE BOX LIGHT

Fuse Box	LH rear corner of engine compartment	100-1
Glove Box Light Switch	LH side of glove box	
G102	Behind instrument cluster	202-1

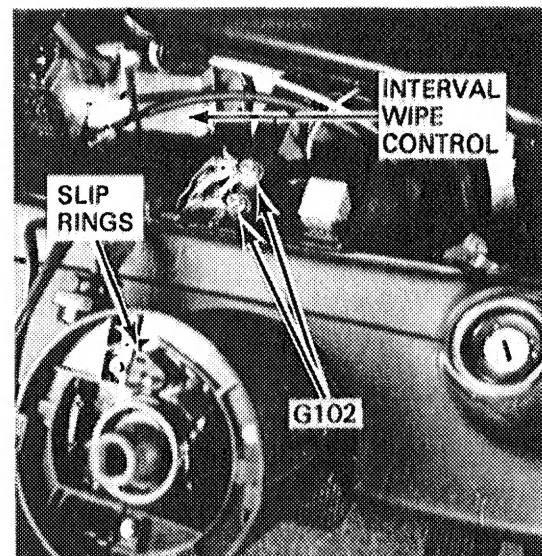


Figure 1 - Behind Instrument Cluster

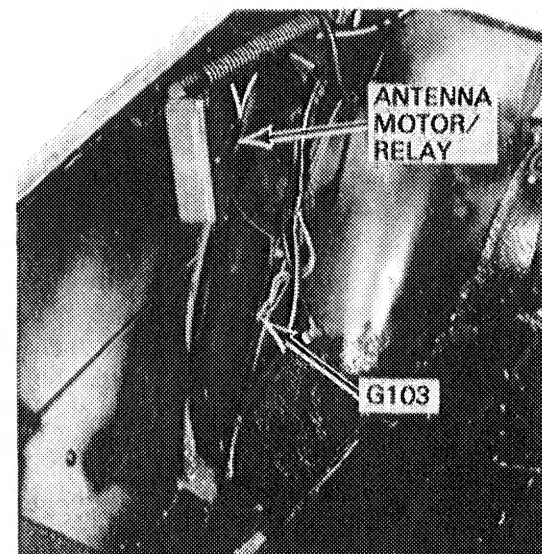


Figure 2 - Behind LH Rear Wheel Well

COMPONENT LOCATIONS

HEADLIGHTS/FOG LIGHTS

Page-Figure

Combination Switch	Upper LH side of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C106 (14 pins)	To left of brake pedal support	205-2
C141 (4 pins)	Rear of LH dual beam headlight	
C142 (4 pins)	Rear of RH dual beam headlight	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

HEATED SEATS

Fuse Box	LH rear corner of engine compartment	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	202-1

HORNS

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	Behind center of steering wheel	
Slip Rings	Behind steering wheel	203-2
Washer Motor	Bottom of washer fluid reservoir, behind LH headlights	
C106 (14 pins)	To left of brake pedal support	205-2
C141 (4 pins)	Rear of LH dual beam headlight	
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of emergency brake support	205-2
C141 (4 pins)	Rear of LH dual beam headlight	
C142 (4 pins)	Rear RH side of RH dual beam headlight	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

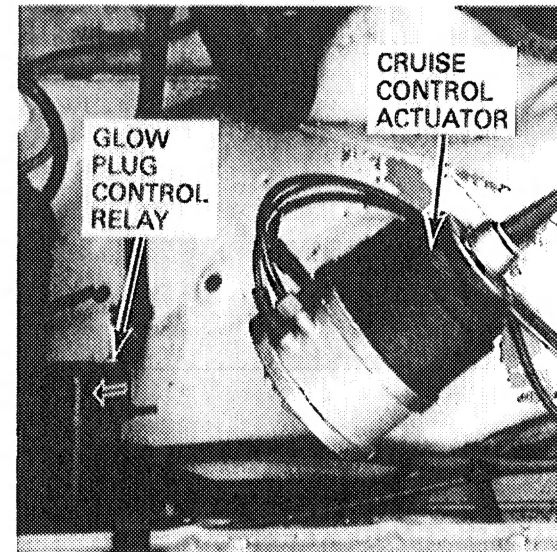


Figure 1 - Ahead of LH Front Wheel Well

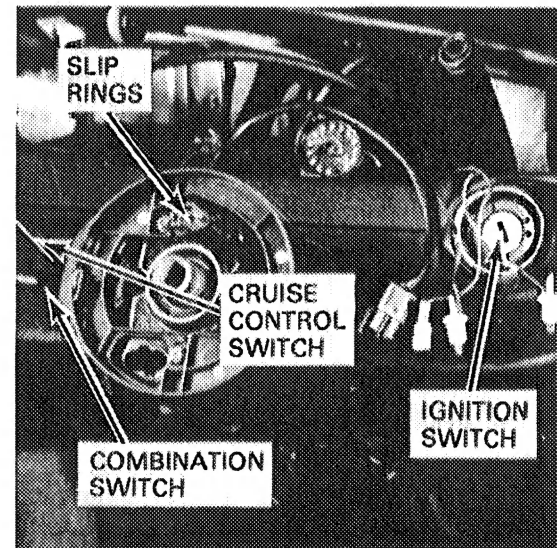


Figure 2 - Top of Steering Column

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch.....	Instrument panel, left of steering column	
Starter Assembly	Lower RH side of engine	
C104 (14 pins)	To right of emergency brake support	205-2
G100	RH front fender, ahead of battery	206-1

POWER WINDOWS

Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches.....	Below each rear window	
Window Relay	Behind instrument cluster	204-2
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	202-1

PRE-GLOW SYSTEM

Engine Temperature Sensor.	Top LH center of cylinder head	207-3
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay.....	Behind LH headlights	203-1
Ignition Switch	Instrument panel, right of steering column	205-1
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch.....	LH side of automatic transmission	208-3
Washer Motor	Bottom of washer fluid reservoir, behind LH headlights	
C130 (6 pins).....	Connected to glow plug control relay	
C137 (6 pins).....	Connected to glow plug control relay	
C141 (4 pins).....	Rear of LH dual beam headlight	
C146 (4 pins).....	Beside upper console, above accelerator pedal	208-2
G100	RH front fender, ahead of battery	206-1
G102	Behind middle of instrument cluster	202-1

REAR DEFOGGER

Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay.	Behind LH side of instrument cluster	204-2
C104 (14 pins)	To right of emergency brake support	205-2
G102	Behind instrument cluster	202-1
G104	Ahead of RH rear light assembly	204-1

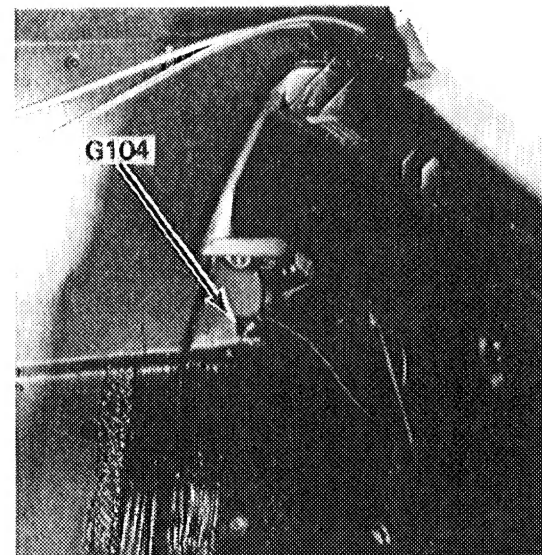


Figure 1 - Ahead of RH Rear Lights

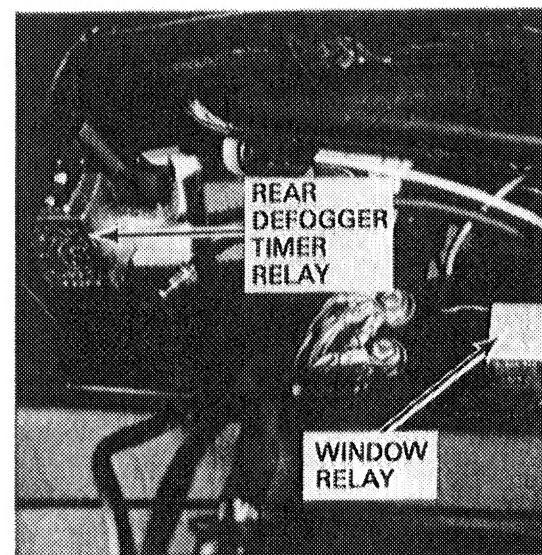


Figure 2 - Behind Instrument Cluster

COMPONENT LOCATIONS

205
240
D

SLIDING ROOF

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Sliding Roof Motor	In trunk, above LH rear wheel well	
Sliding Roof Switch	On upper console	
G102	Behind instrument cluster	202-1

START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm	At rear of fuel injection pump	207-4
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch	LH side of automatic transmission	208-3
C146 (4 pins)	Beside upper console, above accelerator	208-2
G100	RH front fender, ahead of battery	206-1

STOPLIGHTS/CRUISE CONTROL

Brake Switch	On brake pedal support	205-2
Clutch Switch	On clutch pedal support	
Cruise Control Actuator	On front part of LH front wheel well	203-1
Cruise Control Amplifier	To left of brake pedal support	205-2
Cruise Control Switch	Upper left of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Vehicle Speed Sensor	Mounted on rear of speedometer	208-4
C104 (14 pins)	To right of emergency brake support	205-2
C113 (2 pins)	Above clutch pedal	
C114 (2 pins)	Above clutch pedal	
C140 (6 pins)	Behind LH side of instrument panel, above steering column	208-2
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

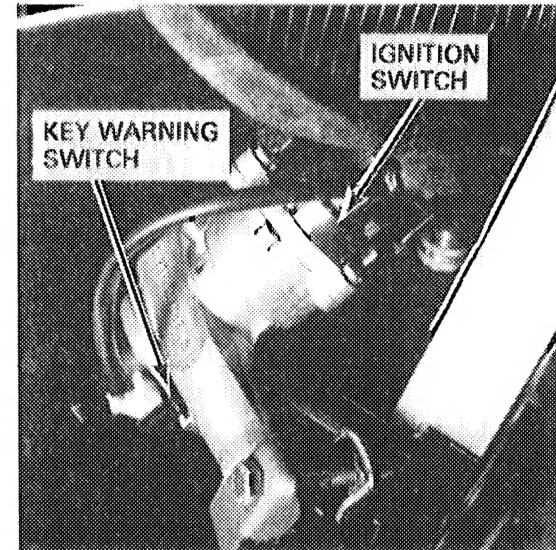


Figure 1 - Ignition Switch
(As Seen From Below)

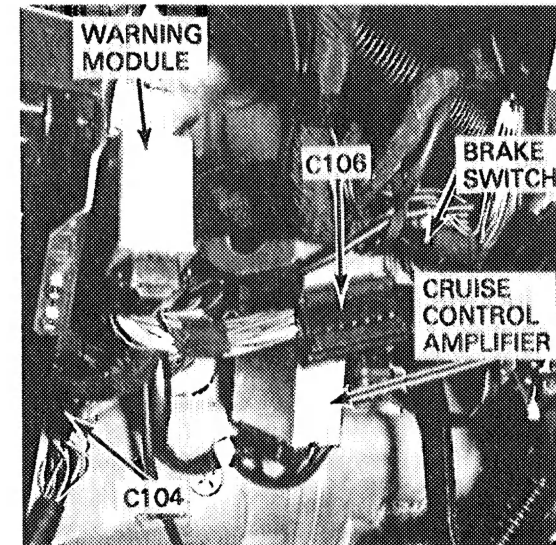


Figure 2 - To Left of Steering Column

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LIGHTS

		Page-Figure
Combination Switch	Upper LH of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Warning Switch/ Flasher	On center console	
C104 (14 pins)	To right of emergency brake support	205-2
C106 (14 pins)	To left of brake pedal support	205-2
C141 (4 pins)	Rear of LH dual beam headlight	
C142 (4 pins)	Rear of RH dual beam headlight	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

WARNING INDICATORS GAUGES/CLOCK/INSTRUMENT CLUSTER
ILLUMINATION

Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	Left center of engine cylinder head	207-4
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Behind LH headlights	203-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of emergency brake support	205-2
C131 (2 pins)	Beside power brake master cylinder	201-2
C132 (2 pins)	Between battery and RH front wheel well	206-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2

WARNING SYSTEM

Brake Fluid Level Switches	In brake fluid reservoir	201-2
Door Switches	In each door jamb	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	205-1
Parking Brake Switch	On emergency brake bracket	
C104 (14 pins)	To right of emergency brake support	205-2
C131 (2 pins)	Beside brake master cylinder	
G102	Behind instrument cluster	202-1

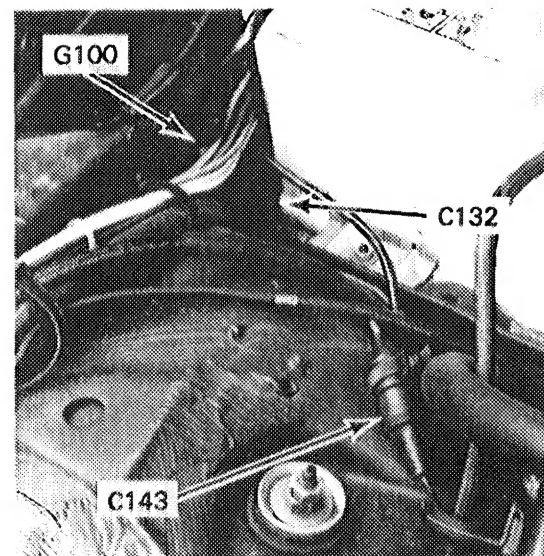


Figure 1 - Ahead of Battery

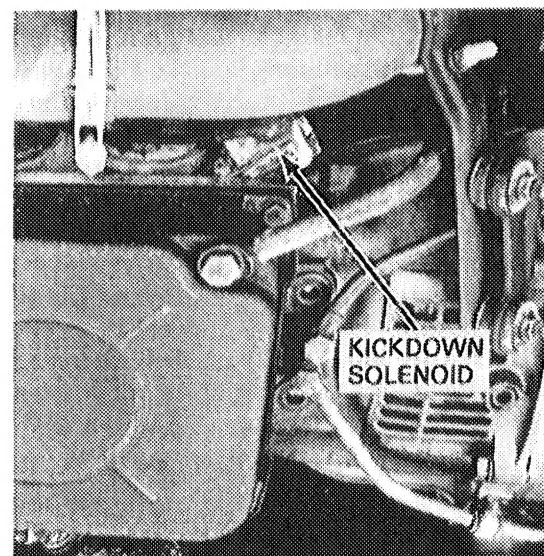


Figure 2 - RH Side of Automatic Transmission

COMPONENT LOCATIONS

WIPER/WASHER

		Page-Figure
Combination Switch	Upper left of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	202-1
Washer Motor	Bottom of wash fluid reservoir, behind LH headlights	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	205-2
C112 (6 pins).....	To upper left of power brake booster	207-1
G102	Behind instrument cluster	202-1

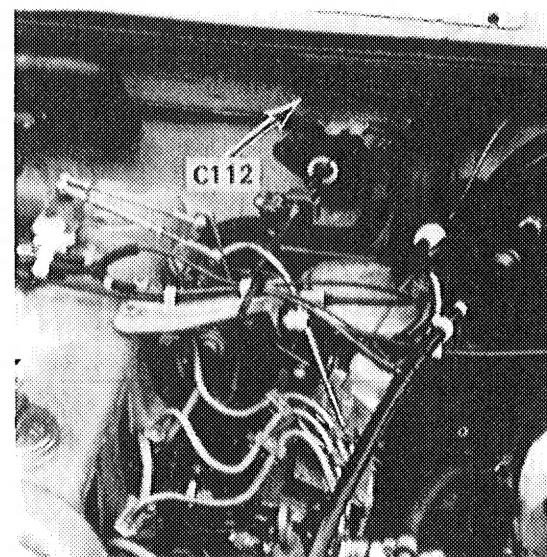


Figure 1 - To Right of Power Brake Booster

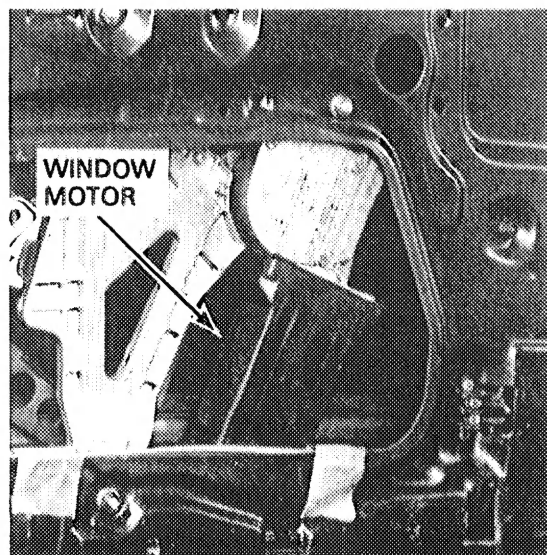


Figure 2 - Inside Driver's Door

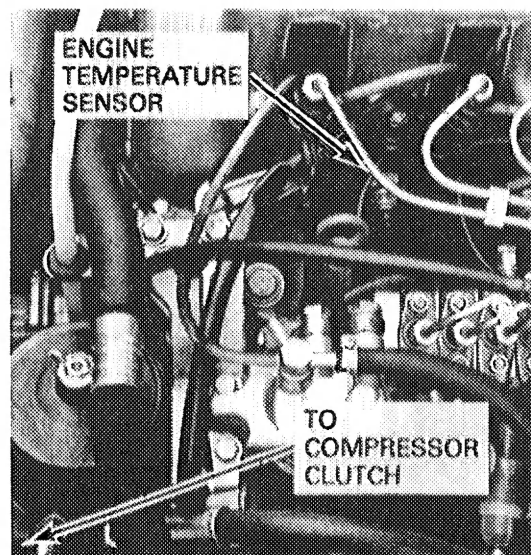


Figure 3 - Front LH Side of Engine

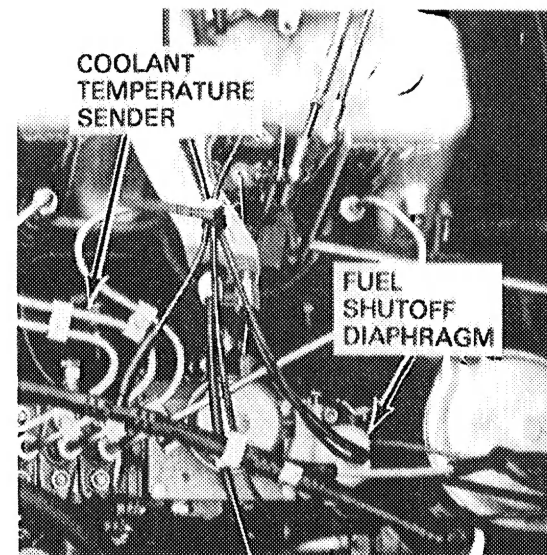


Figure 4 - Rear LH Side of Engine

COMPONENT LOCATIONS

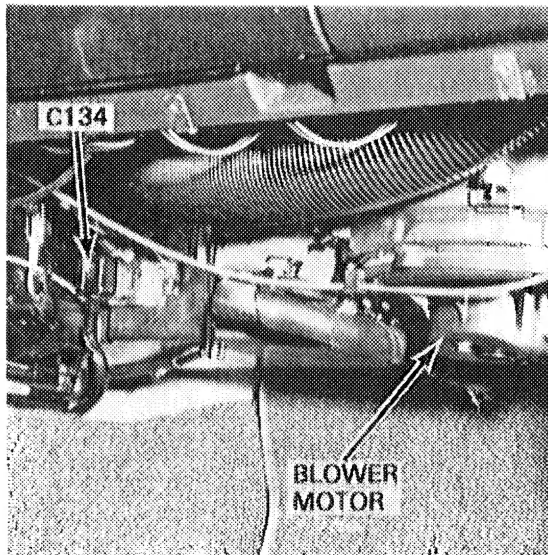


Figure 1 - Under RH Side of Instrument Panel

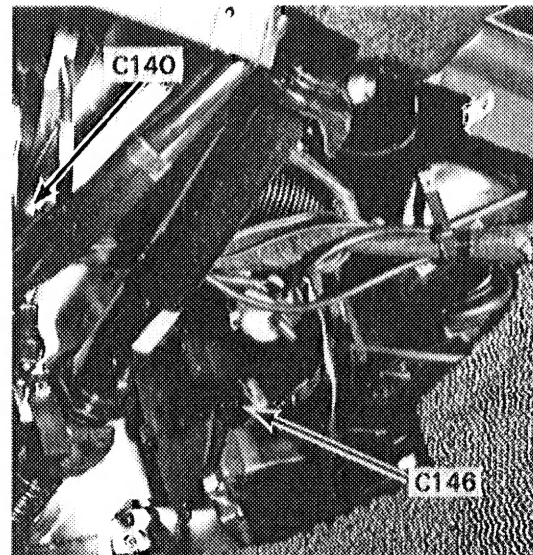


Figure 2 - To Right of Steering Column

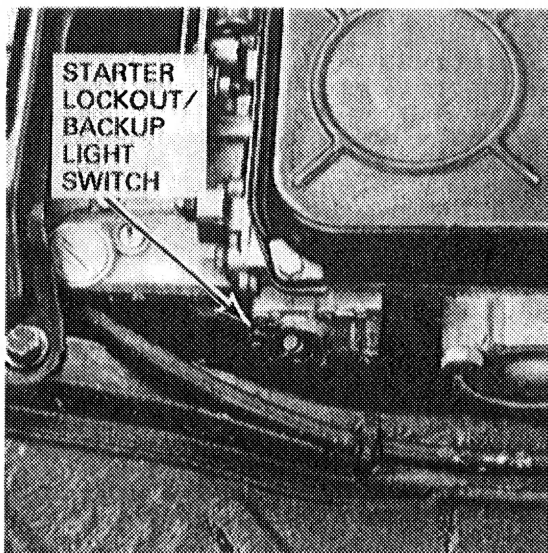


Figure 3 - LH Side of Automatic Transmission

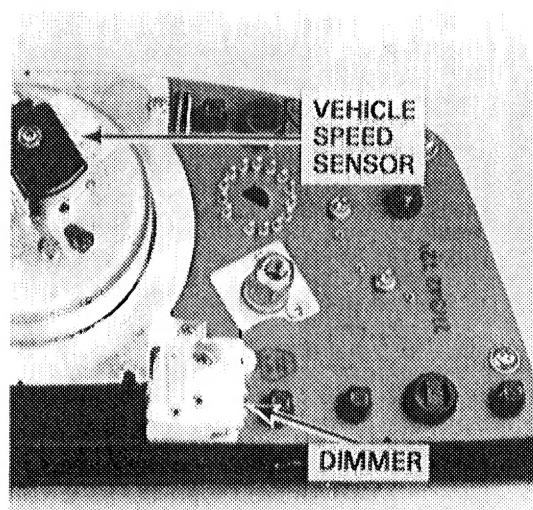


Figure 4 - Back of Instrument Cluster